

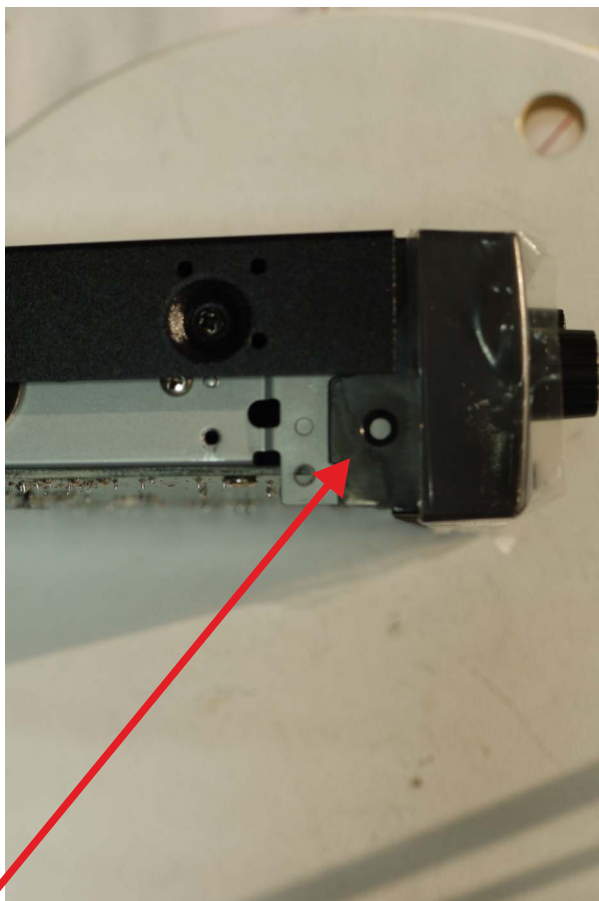
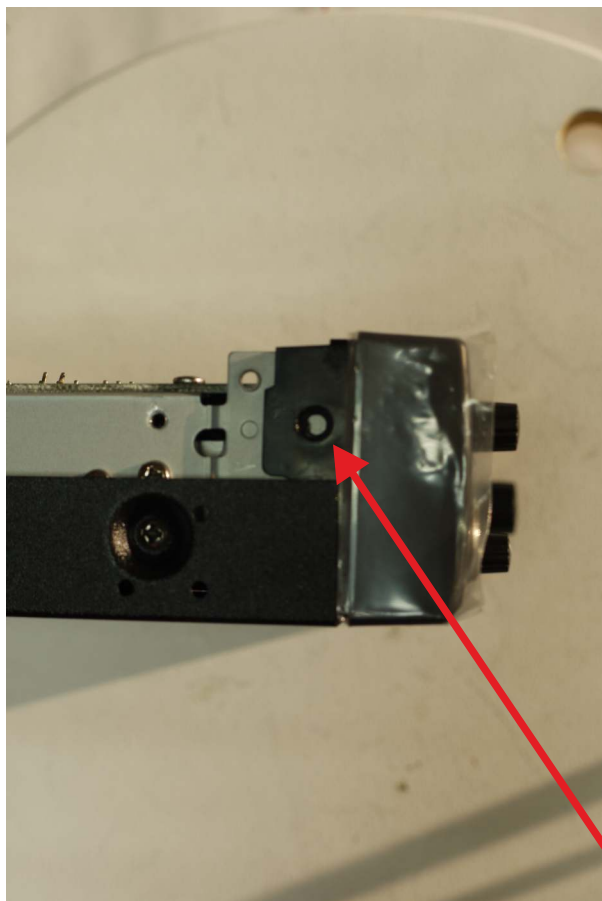


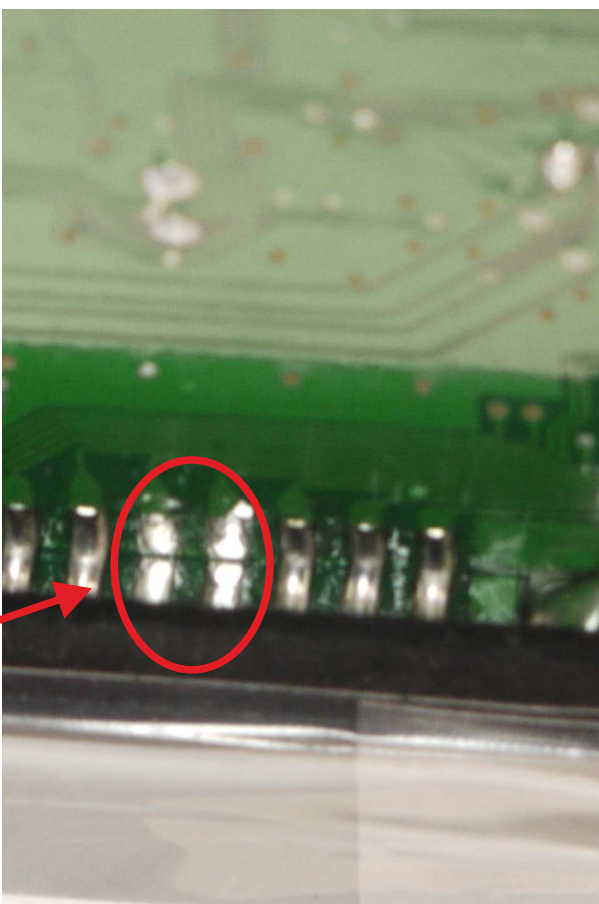

unscrew

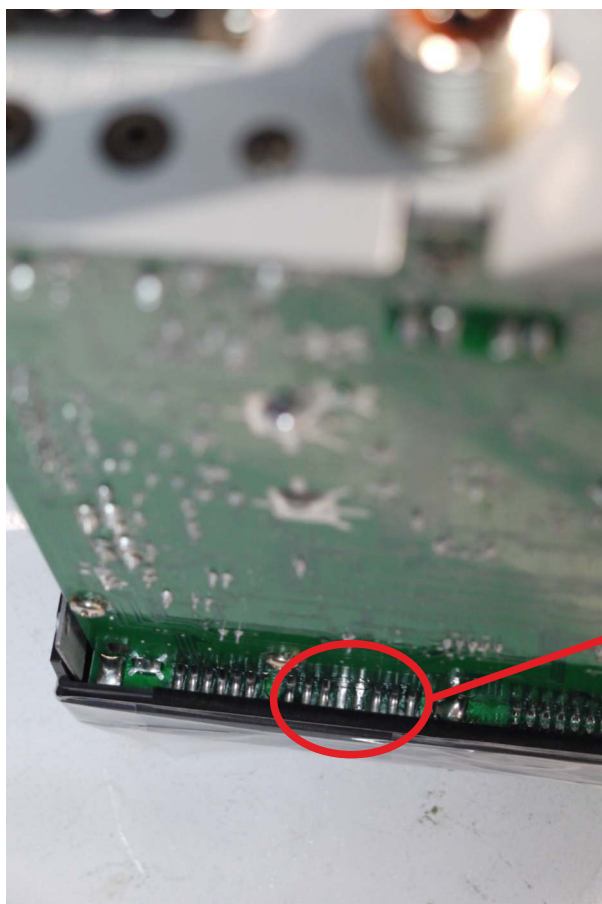

These two points must be soldered
for transform into CB 400 Ch